

Wattage Requirement Guide

Amps x Volts=Watts

Item	Running Wattage	Starting Wattage
Dishwasher - Cool Dry	700	1400
Dishwasher - Hot Dry	1450	1400
Coffee Maker	1750	0
Electric Fry Pan	1300	0
Refrigerator or Freezer	700	2200
Dehumidifier	650	800
Clothes Dryer - Gas	700	1800
Clothes Dryer - Electric	5750	1800
Toaster - 2 slice	1050	0
Toaster - 4 slice	1650	0
Automatic Washer	1150	2300
Microwave Oven	625	800
Electric Range	1500	0
Iron	1200	0
Garage Door Opener - 1/4HP	550	1100
Garage Door Opener - 1/2HP	725	1400
Hair Dryers	300 - 1200	0
Lights	As indicated on bulb	
Radio	50 - 200	0
Well Pump - 1/3HP	750	1400
Well Pump - 1/2HP	1050	2150
Sump Pump - 1/3HP	800	1300
Sump Pump - 1/2HP	1050	2150
Television	300	0
Vacuum Cleaner	800	0
Air Conditioner - 10,000 BTU	1500	2200
Air Conditioner - 20,000 BTU	2500	3300
Air Conditioner - 24,000 BTU	3800	4950
Air Conditioner - 32,000 BTU	5000	6500
Air Conditioner - 40,000 BTU	6000	7800
Computer - Desktop	600 - 800	0
Computer - Laptop	200 - 250	0
Computer - Monitor	200 - 250	0
Fax	600 - 800	0
Printer	400 - 600	0